


Type 1190

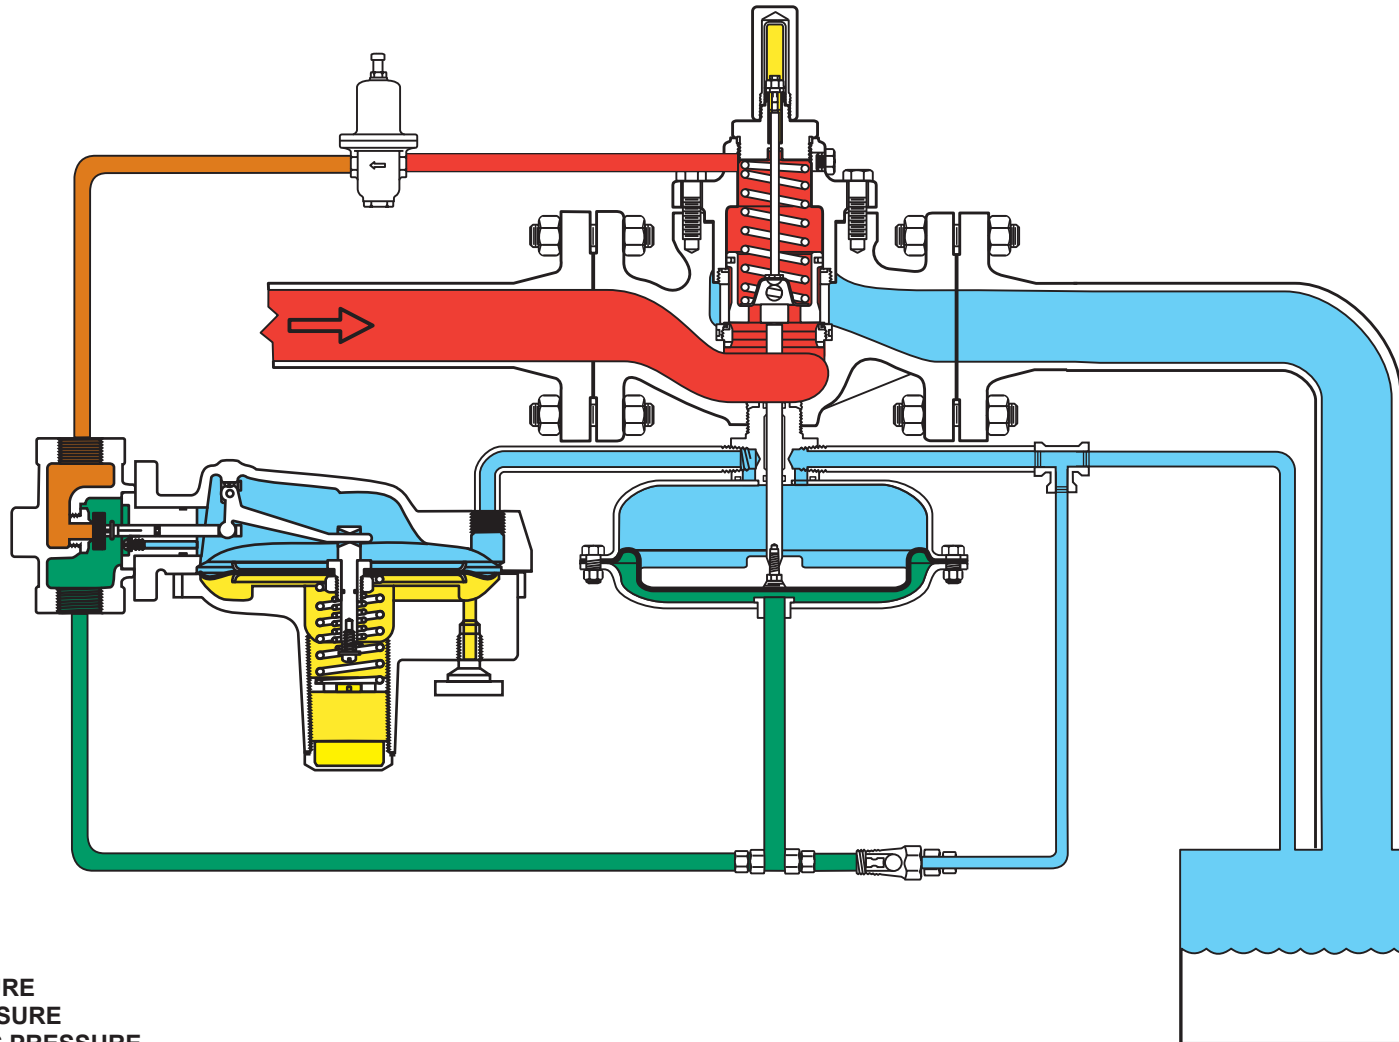

- █ INLET PRESSURE
- █ OUTLET PRESSURE
- █ ATMOSPHERIC PRESSURE
- █ LOADING PRESSURE
- █ PILOT SUPPLY PRESSURE