

# Rosemount™ 702 Wireless Discrete Transmitter



## Safety messages

Failure to follow these installation guidelines could result in death or serious injury. Only qualified personnel should perform the installation.

### **⚠ WARNING**

#### **Explosion hazard that could result in death or serious injury.**

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Review the approvals section of this manual for any restrictions associated with a safe installation.

Before connecting a handheld communicator in an explosive atmosphere, ensure that the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

#### **Magnetic hazard that can result in death or serious injury**

This device contains magnets which could be harmful to pacemaker wearers.

#### **Electrostatic hazard that can result in death or serious injury**

Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

The power module may be replaced in a hazardous area. The power module has surface resistivity greater than one gigaohm and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

The polymer enclosure has surface resistivity greater than one gigaohm and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

### **NOTICE**

#### **Shipping considerations for wireless products.**

The unit was shipped to you without the power module installed. Remove the power module prior to any re-shipping.

Primary lithium batteries are regulated in transportation by the U. S. Department of Transportation, and are also covered by IATA (International Air Transport Association), ICAO (International Civil Aviation Organization), and ADR (European Ground Transportation of Dangerous Goods). It is the responsibility of the shipper to ensure compliance with these or any other local requirements. Consult current regulations and requirements before shipping.

### **⚠ WARNING**

#### **Physical access**

Unauthorized personnel may potentially cause significant damage to and/or misconfiguration of end users' equipment. This could be intentional or unintentional and needs to be protected against.

Physical security is an important part of any security program and fundamental in protecting your system. Restrict physical access by unauthorized personnel to protect end users' assets. This is true for all systems used within the facility.

**Contents**

About this guide..... 5

Wireless considerations..... 6

Mounting the transmitter with a strap.....9

Device network configuration..... 15

Verify operation.....17

Reference information: wiring switch inputs, output circuits, and leak sensors.....21

Safety shower and eye wash monitoring.....44

Product certification..... 46



# 1 About this guide

This guide provides basic guidelines for the Rosemount 702 Wireless Discrete Transmitter. It does not provide instructions for detailed configuration, diagnostics, maintenance, service, troubleshooting, or installations. Refer to the [Rosemount 702 Reference Manual](#) for more instruction. This guide and the manual are available electronically on [Emerson.com/Rosemount](https://Emerson.com/Rosemount).

Model number	Functionality	Manual
702DX32/42	Two channel discrete I/O	<a href="#">Rosemount 702 Reference Manual</a>
702DX61	One channel for nVent™ RAYCHEM liquid hydrocarbon leak detection	<a href="#">Rosemount 702 Reference Manual</a>
702DX52	Discrete Transmitter for Plunger Arrival Detection	<a href="#">Rosemount 702 Wireless Discrete Transmitter for plunger arrival Reference Manual</a>

## 2 Wireless considerations


### 2.1 Power up sequence

Verify the Wireless Gateway is installed and functioning properly before any wireless field devices are powered. Install the Power Module, SmartPower™ Solutions model number 701PBKKF into the Rosemount 702 Wireless Discrete Transmitter to power the device. Power up wireless devices in order of proximity from the Gateway, beginning with the closest device, then working outward from the Gateway. This results in a simpler and faster network formation. Enable Active Advertising on the Gateway to ensure new devices are able to join the network faster.

### 2.2 Antenna position

Position the antenna vertically, either straight up or straight down, and approximately 3 ft. (1 m) from any large structure, building, or conductive surface to allow for clear communication to other devices.

**Figure 2-1: Antenna Position**

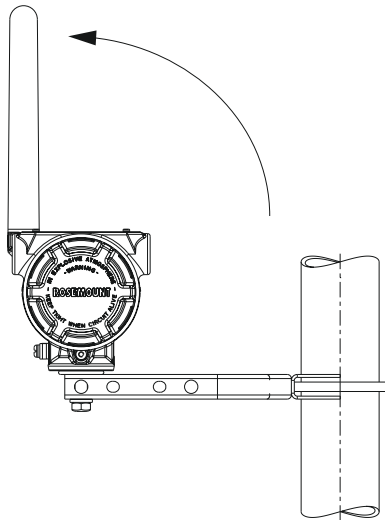

### 2.3 Conduit entry

Upon installation, ensure each conduit entry is either sealed with a conduit plug using approved thread sealant, or has an installed conduit fitting or cable gland with appropriate threaded sealant.


---

**Note**

The conduit entries are threaded 1/2-14 NPT.

---

**Figure 2-2: Conduit Entry**

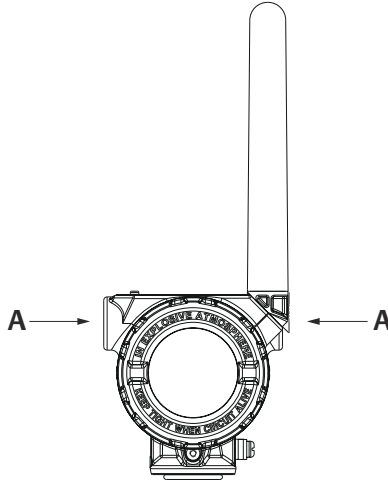


A. Conduit entry

---

## 2.4 Field Communicator connections

The power module must be installed before the Field Communicator can interface with the Rosemount 702 Wireless Discrete Transmitter. For HART® Wireless Transmitter communication via a Field Communicator, a Rosemount 702 Wireless Device Dashboard (DD) is required. To obtain the latest DD, visit the Field Communicator System Software and Device Description site at: [Emerson.com/Field-Communicator](https://www.emerson.com/en-us/field-communicator). This transmitter uses the Black Power Module; Order model number 701PBKKF.

**Figure 2-3: Connection Diagram**

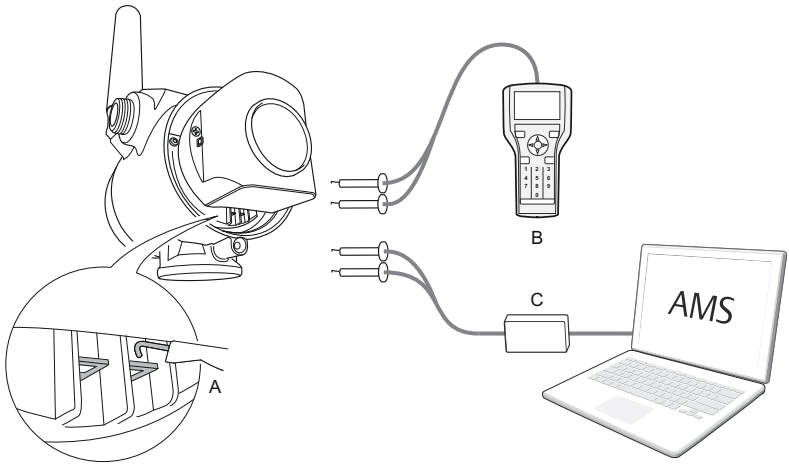

- A. *Communication terminals*
- B. *Handheld communicator*
- C. *HART modem*

After the Wireless Gateway has been installed and is functioning properly, set up the transmitter and all other wireless devices.




## 3 Mounting the transmitter with a strap

### 3.1 Direct mount installation

#### Note

Do not employ direct mount installation when using tubing and connectors such as Swagelok® fittings.

**Figure 3-1: Direct Mount**

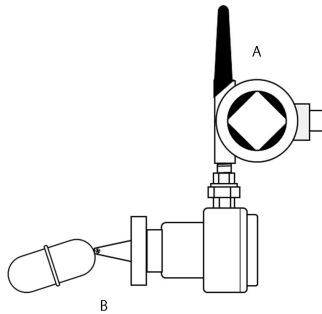


A. Rosemount 702 Wireless Discrete Transmitter

B. Float switch

#### Procedure

1. Install the switch according to standard installation practices making sure to use thread sealant on all connections.
2. Using the threaded conduit entry, attach the Rosemount 702 housing to the switch.
3. Referring to the wiring diagram (see [Reference information: wiring switch inputs, output circuits, and leak sensors](#)), attach the switch wiring to the terminals.
4. Connect the Power Module.

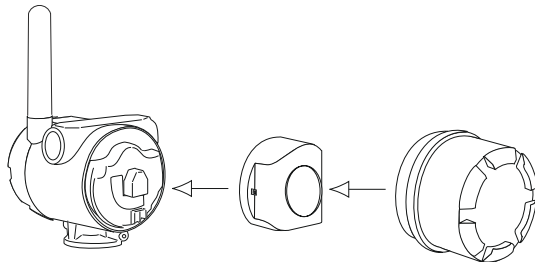


---

**Note**

Wireless devices should be powered up in order of proximity from the Wireless Gateway, beginning with the closest device to the Gateway. This will result in a simpler and faster network formation.

---


5. Close the housing cover and tighten to safety specification. Always ensure a proper seal so the metal touches metal, but do not over tighten.
6. Position antenna vertically, either straight up or straight down. The antenna should be approximately 3 ft. (0.91 m) from any large structures or buildings, to allow clear communication to other devices.

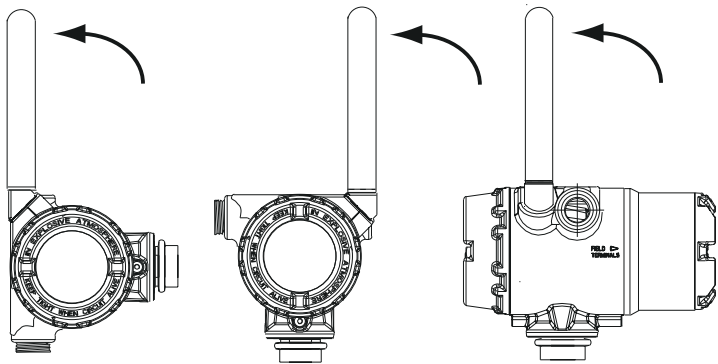

### 3.2 Remote mount installation

---


**Figure 3-2: Remote Mount**

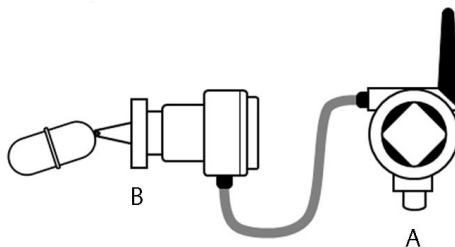

- A. Rosemount 702 Wireless Discrete Transmitter
  - B. Float switch
-

## Procedure

1. Install the switch according to standard installation practices making sure to use thread sealant on all connections.
2. Run wiring (and conduit if necessary) from the switch to the Rosemount 702 Wireless Discrete Transmitter.
3. Pull the wiring through the threaded conduit entry of the transmitter.
4. Referring to the wiring diagram (see [Reference information: wiring switch inputs, output circuits, and leak sensors](#)), attach the switch wiring to the terminals.
5. Connect the power module.

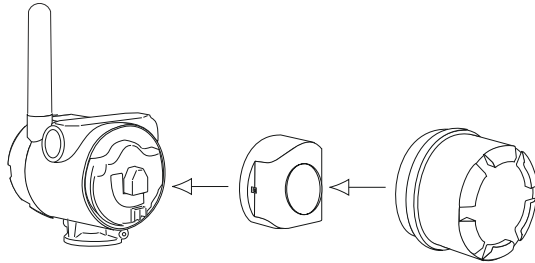

---

### Note

Power up the wireless devices in order of proximity from the Wireless Gateway, beginning with the closest device to the gateway. This will result in a simpler and faster network formation.


---

### Note

Always ensure a proper seal so the metal touches metal, but do not overtighten.

---

6. Close the housing cover and tighten to safety specification.
7. Position antenna vertically, either straight up or straight down. Position the antenna approximately 3 ft. (0.91 m) from any large structures or buildings to allow clear communication with other devices.

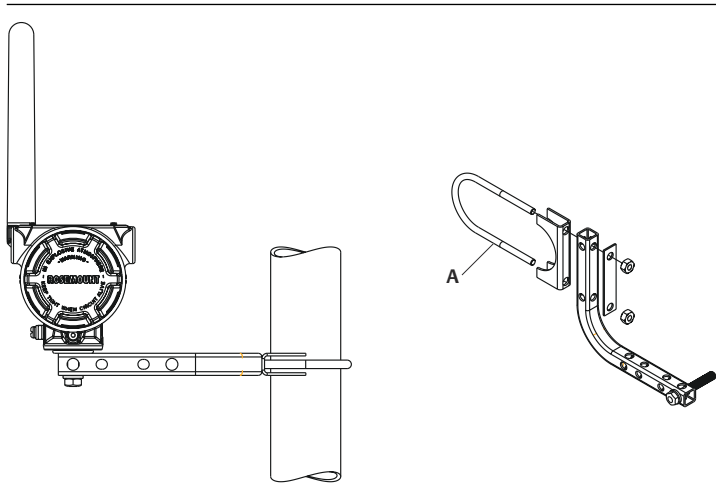


A. 2" U-bolt for pipe fitting

### 3.3 Remote antenna (optional)

The high-gain remote antenna options provide flexibility for mounting the device based on wireless connectivity, lightning protection, and current work practices.

**Figure 3-3: Rosemount 702 Wireless Discrete Transmitter with Remote Antenna**

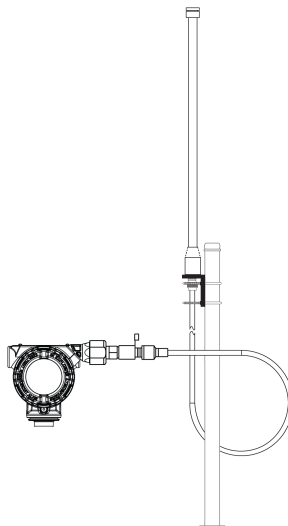

### 3.3.1 Remote antenna installation (WN/WJ option)

#### Prerequisites

Find a location where the remote antenna has optimal wireless performance. In most instances, this is 15–25 ft. (4.6–7.6 m) above the ground or 6 ft. (2 m) above obstructions or major infrastructure.

#### **⚠ WARNING**

When installing remote mount antennas for the transmitter, always use established safety procedures to avoid falling or contact with high-power electrical lines.

Install remote antenna components for the transmitter in compliance with local and national electrical codes and use best practices for lightning protection.

Before installing, consult with the local area electrical inspector, electrical officer, and work area supervisor.

The transmitter remote antenna option is specifically engineered to provide installation flexibility while optimizing wireless performance and local spectrum approvals. To maintain wireless performance and avoid non-compliance with spectrum regulations, do not change the length of cable or the antenna type.

If the supplied remote mount antenna kit is not installed per these instructions, Emerson is not responsible for wireless performance or non-compliance with spectrum regulations.

---

#### Procedure

1. Mount the antenna on a 1.5–2 in. (3.81–5.08 cm) pipe mast using the supplied mounting equipment.
2. Connect the lightning arrestor directly to the top of the Rosemount 702 Wireless Discrete Transmitter.
3. Install the grounding lug, lock washer, and nut on top of lightning arrestor.

---

#### Note

When connecting the antenna to the lightning arrestor, ensure the drip loop is not closer than 1 ft. (0.3 m) from the lightning arrestor.


4. Using the supplied LMR-400 coaxial cable, connect the antenna to the lightning arrestor.
5. Use the coaxial sealant to seal each connection between the wireless field device, lightning arrestor, cable, and antenna.

---

**Note**

The remote mount antenna kit includes coaxial sealant for weatherproofing the cable connections for the lightning arrester, antenna, and Rosemount 702. Coaxial sealant must be applied to guarantee performance of the wireless field network. See [Figure 3-4](#) for details on how to apply coaxial sealant.

---

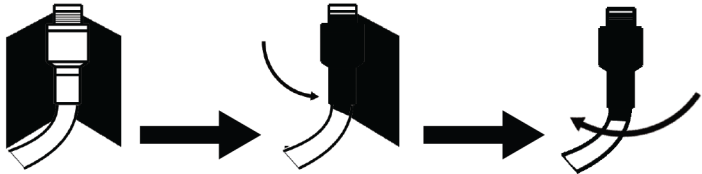**Figure 3-4: Applying Coaxial Sealant to Cable Connections**


6. Ensure the mounting mast and lightning arrester are grounded according to local/national electrical code.

Any spare lengths of coaxial cable should be placed in 12-in. (0.3 m) coils.

## 4 Device network configuration

To communicate with the Wireless Gateway, and ultimately the host system, the Rosemount 702 Wireless Discrete Transmitter must be configured to communicate with the wireless network. This step is the wireless equivalent of connecting wires from a transmitter to the information system. Using a Field Communicator or AMS Wireless Configurator, enter the Network ID and Join Key so they match the Network ID and Join Key of the Gateway and other devices in the network. If the Network ID and Join Key do not match that of the Gateway, the transmitter will not communicate with the network. The Network ID and Join Key may be obtained from the Wireless Gateway on the **Setup Network Settings** page on the web interface, shown in [Figure 4-1](#).

**Figure 4-1: Gateway Network Settings**

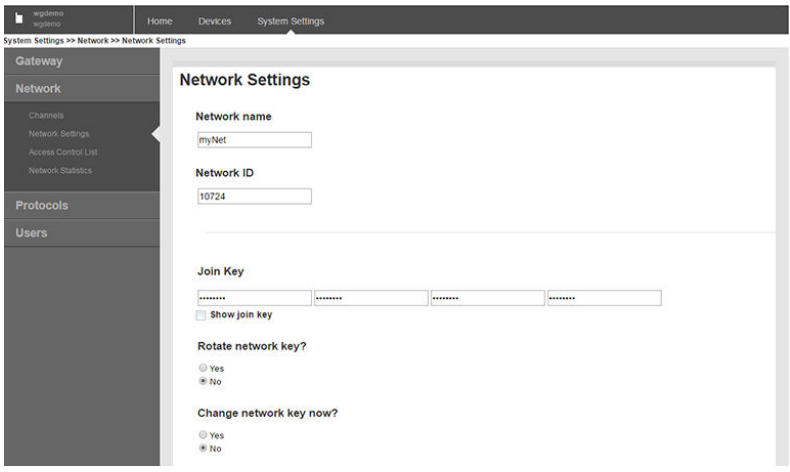

### 4.1 AMS Wireless Configurator

#### Procedure

1. Right click on the Rosemount 702 Wireless Discrete Transmitter.
2. Select **Configure**.
3. When the menu opens, select **Join Device to Network**.
4. Follow the method to enter the Network ID and Join Key.

## 4.2 Field Communicator

The Network ID and Join Key may be changed in the wireless device by using the following Fast Key sequence. Set both Network ID and Join Key.

Function	Fast Key sequence	Menu items
Wireless setup	2,2,1	Network ID, Join Device to Network



## 5 Verify operation

There are four methods available to verify operation:

- Using the [Local display](#)
- Using the [Field Communicator](#)
- Using the [Wireless Gateway](#)
- Using [AMS Wireless Configurator](#)

If the device was configured with the Network ID and Join Key, and sufficient time has passed, the transmitter will be connected to the network.

### 5.1 Local display





#### 5.1.1 Start-up sequence

When the Rosemount 702 Wireless Discrete Transmitter is first powered up, the LCD display will display a sequence of screens: All Segments On, Device Identification, Device Tag, and then the user-selected variables of the periodic display.

During steady-state operation, the LCD display gives a periodic display of user-selected variables at the configured wireless update rate. The variables can be selected from a list of six:

- Channel 1 State
- Channel 1 Count
- Channel 2 State
- Channel 2 Count
- Electronics Temperature
- Supply Voltage

Refer to the Rosemount 702 [Reference Manual](#) for error codes and other LCD display messages. The chevron-shaped status bar at the top of the screen indicates the progress of the network join process. When the status bar is filled, the device is successfully connected to the wireless network.

Searching for network	Joining network	Connected with limited bandwidth	Connected
			

## 5.2 Field Communicator

For HART® Wireless transmitter communication, a Rosemount 702 Wireless Discrete Transmitter DD is required. To obtain the latest DD, visit the Emerson Easy Upgrade site at: [Emerson.com/Device-Install-Kits](https://emerson.com/Device-Install-Kits).

Function	Key sequence	Menu items
Communications	3, 3	Join Status, Wireless Mode, Join Mode, Number of Available Neighbors, Number of Advertisements Heard, Number of Join Attempts

## 5.3 Wireless Gateway

### Procedure

In the Gateway's integrated web server, navigate to the user interface page. This page shows if the device joined the network and is communicating properly. Refer to Emerson Wireless Gateway [Reference Manual](#).


### Note

It may take several minutes for the device to join the network.

### Note

If the device joins the network and immediately has an alarm present, it is likely caused by the sensor configuration. Check the sensor wiring (see [Figure 6-1](#)) and the sensor configuration (see [Table 6-7](#)).


Figure 5-1: Wireless Gateway Explorer Page

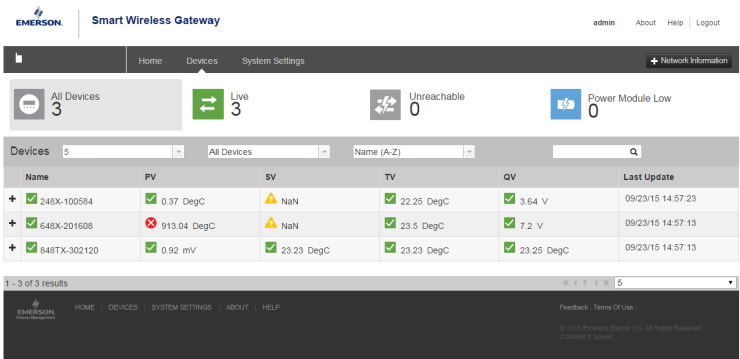

### 5.4 AMS Wireless Configurator

When the device has joined the network, it will appear in AMS Wireless Configurator as illustrated below.

Figure 5-2: AMS Wireless Configurator, Device Explorer Screen

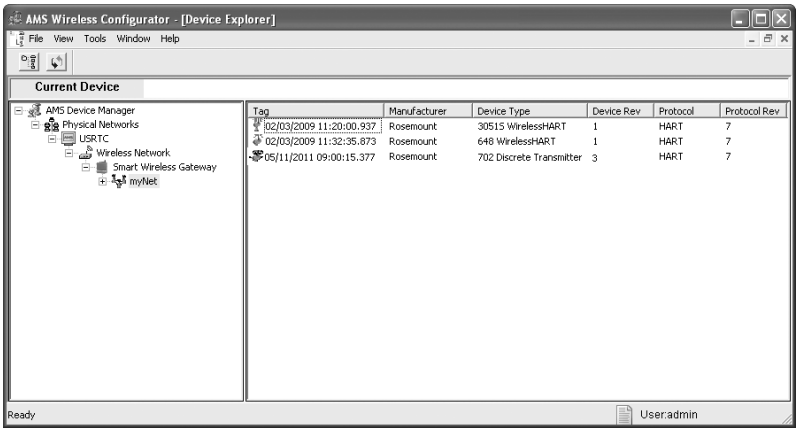


### 5.5 Troubleshooting

If the device is not joined to the network after power up, verify the correct configuration of the Network ID and Join Key, and that Active Advertising has been enabled on the Wireless Gateway. The Network ID and Join Key in the device must match the Network ID and Join Key of the Gateway.

### Procedure

1. From the Gateway's integrated web interface, select **Setup Network Settings** to obtain the Network ID and Join Key (see [Figure 5-3](#)).

**Figure 5-3: Gateway Network Settings**

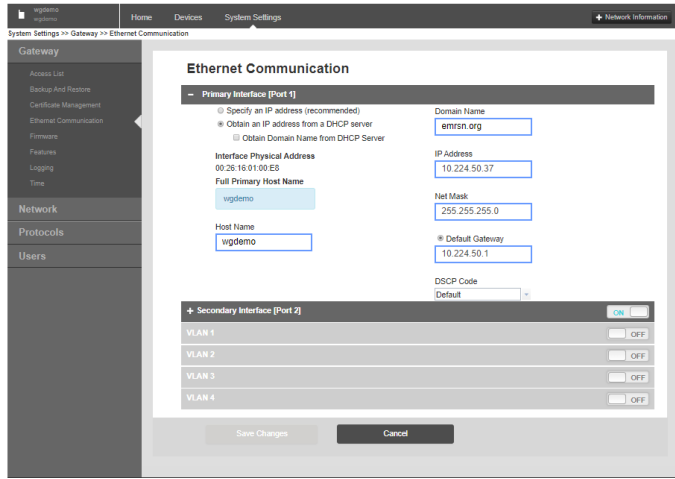

2. To change the Network ID and Join Key in the wireless device, use a Field Communicator and enter the following Fast Key sequence.

Function	Fast Key sequence	Menu items
Wireless	2, 1, 1	Join Device to Network

3. Follow the on-screen prompts.


## 6 Reference information: wiring switch inputs, output circuits, and leak sensors

### 6.1 Dry contact switch inputs

The Rosemount 702 Wireless Discrete Transmitter has a pair of screw terminals for each of two channels, and a pair of communication terminals. These terminals are labeled as follows:

<b>CH1+:</b>	Channel one positive
<b>CMN:</b>	Common
<b>CH2+:</b>	Channel two positive
<b>CMN:</b>	Common
<b>COMM:</b>	Communication

**Figure 6-1: Rosemount 702 Wireless Discrete Transmitter Terminal**

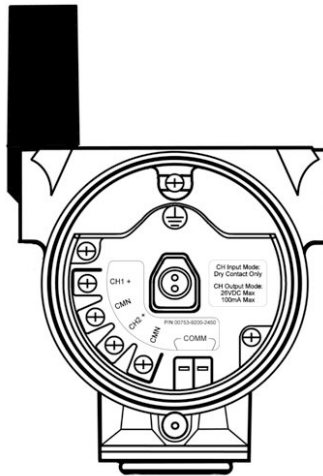

### 6.2 Wireless output specifications

#### 6.2.1 Dual input


The Rosemount 702 Wireless Discrete Transmitter will accept the input from one or two single-pole single-throw switches on inputs CH1 and CH2. The wireless output of the transmitter will be both a primary variable (PV) and a secondary variable (SV). The PV is

determined by the CH1 input. The SV is determined by the CH2 input. A closed switch drives a TRUE output. An open switch drives a FALSE output.

**Note**

Any dry contact input may optionally be inverted by the device, to change the discrete logic state. This is useful, for instance, if a normally open switch is used to replace a normally closed switch.

**Figure 6-2: Single and Dual Input**

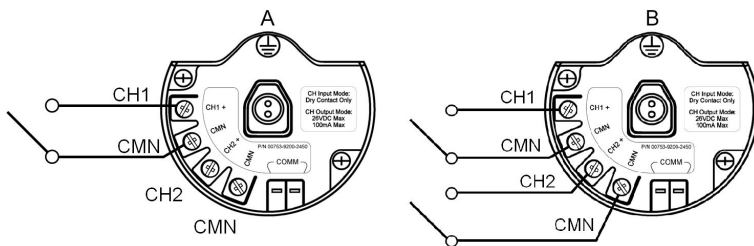

- A. Single Input
- B. Dual Input


**Table 6-1: Single or Dual Input**

Switch input	Wireless output	Switch input	Wireless output
CH1	PV	CH2	SV
Closed	TRUE (1.0)	Closed	TRUE (1.0)
Open	FALSE (0.0)	Open	FALSE (0.0)

6.2.2 Dual input, limit contact logic

When configured for Limit Contact Logic, the Rosemount 702 Wireless Discrete Transmitter accepts the input from two single-pole single-throw switch on inputs CH1 and CH2, and uses limit contact logic for the determination of the wireless outputs.

**Figure 6-3: Dual Input, Limit Contacts**

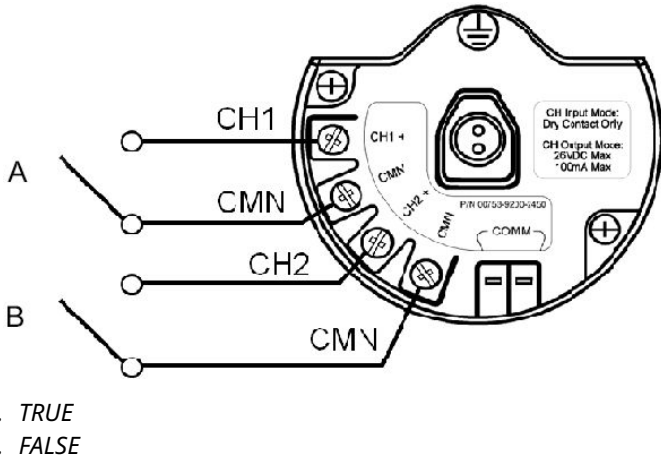


**Table 6-2: Dual Input, Limit Contact Logic**

Switch input		Wireless output	
CH1	CH2	PV	SV
Open	Open	TRAVEL (0.5)	TRAVEL (0.5)
Open	Closed	FALSE (0.0)	FALSE (0.0)
Closed	Open	TRUE (1.0)	TRUE (1.0)
Closed	Closed	FAULT(NaN)	FAULT(NaN)

### 6.2.3 Dual input, opposing contact logic

When configured for Opposing Contact Logic, the Rosemount 702 Wireless Discrete Transmitter accepts the input from a double-pole single-throw switch on inputs CH1 and CH2, and uses opposing contact logic for the determination of the wireless outputs.

**Figure 6-4: Dual Input, Opposing Contact**

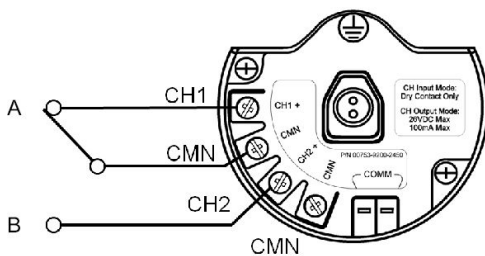

- A. TRUE
- B. FALSE

**Table 6-3: Dual input, Opposing Contact Logic**


Switch inputs		Wireless outputs	
CH1	CH2	PV	SV
Open	Open	FAULT(NaN)	FAULT(NaN)
Open	Closed	FALSE (0.0)	FALSE (0.0)
Closed	Open	TRUE (1.0)	TRUE (1.0)
Closed	Closed	FAULT(NaN)	FAULT(NaN)

### 6.3 Momentary discrete inputs, measurement option code 32 and 42

The Rosemount 702 Wireless Discrete Transmitter is capable of detecting momentary discrete inputs of 10 milliseconds or more in duration, regardless of the wireless update rate. At each wireless update, the device reports current discrete input state along with an accumulating count of close-open cycles for each input channel.




**Figure 6-5: Momentary Inputs and Accumulating Count**

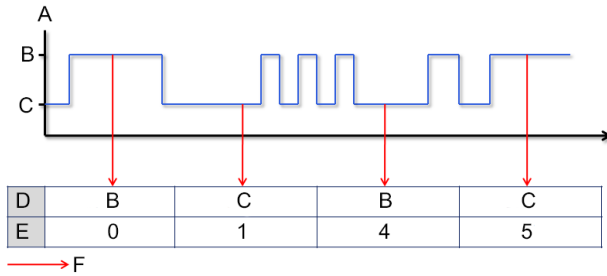

- A. Input Switch State
- B. Closed
- C. Open
- D. State
- E. Count
- F. Wireless Updates

**Figure 6-6: Reporting of Current Discrete State and Count in AMS Device Manager**

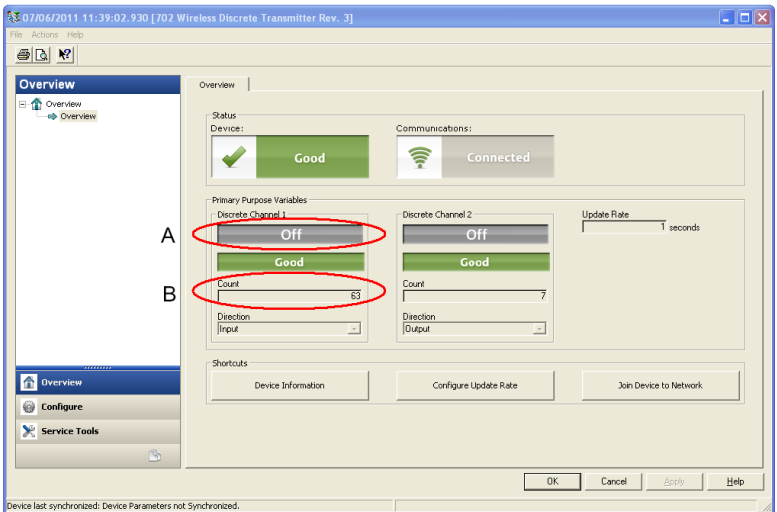

- A. Current State
- B. Count

### 6.3.1 Setting variable reporting

The Rosemount 702 Wireless Discrete Transmitter has two choices for variable reporting: Classic - Discrete State Only or Enhanced – Discrete State and Count.

#### Procedure

1. In AMS Device Manager, select **Configure** → **Manual Setup** → **HART**.
2. Set Variable Reporting as desired.

Option	Description
Classic - Discrete State Only	The transmitter will report variables exactly like the previous version of the device (measurement option code 22).
Enhanced – Discrete State with Count	The transmitter will provide both current state of the discrete channels, and a count of the discrete state change cycles.

Table 6-4 shows the variable mapping for both cases.

**Table 6-4: Variable Mapping**

Variable reporting	PV	SV	TV	QV
Classic – Discrete State Only	CH1 State	CH2 State	Electronics temperature	Supply voltage
Enhanced – Discrete State with Count	CH1 State	CH2 State	CH1 Count	CH2 Count

### 6.3.2 Latching feature

The Rosemount 702 Wireless Discrete Transmitter has a latching feature that, when enabled, allows detection of momentary state changes to be held for a configurable latch period. The latching feature can be configured to detect either rising or falling state changes, dependent on the input signal. The latch period (hold time) can be configured anywhere between 0 seconds and 10 minutes in 1 second increments.

#### Note

Latching mode is only applicable to input signals.

Setting the Hold Time to less than the wireless update rate will result in unexpected results.

Latching feature only available with software revision 4 or newer.


The default settings for each measurement option is found in [Table 6-5](#). Latching mode cannot be configured with measurement option 61 for hydrocarbon leak detection.

**Table 6-5: Latching Mode Default Settings**

Measurement option	Latching mode	Hold time
32	Disabled	N/A
42	Disabled	N/A
52	Latched rising	1 minute
61	N/A	N/A


Once the Rosemount 702 recognizes that the input signal has transitioned, the reported state reports the latched value. As soon as the reported state is no longer latched, the device is prepared for the next event. [Figure 6-7](#) is an example of a latched rising and [Figure 6-8](#) for latched falling configurations.

**Figure 6-7: Latched Rising**

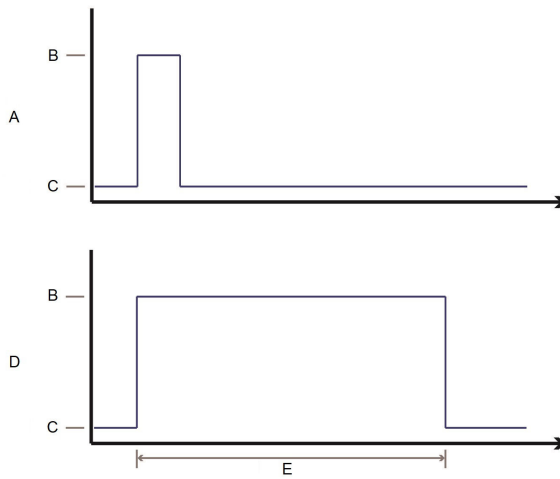


- A. *Input signal*
- B. *True*
- C. *False*
- D. *Reported state*
- E. *Hold time*

**Figure 6-8: Latched Falling**

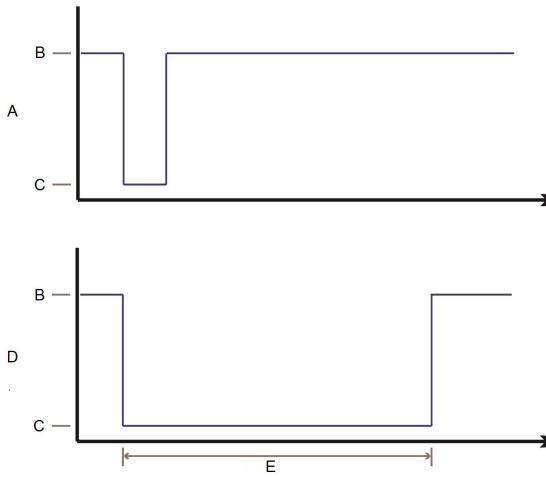

- A. Input signal
- B. True
- C. False
- D. Reported state
- E. Hold time

The latch only applies to transitions into the active state. If the input signal goes inactive and active again before the initial latch hold timer expires, the latch hold timer restarts from the beginning of the most recent event.

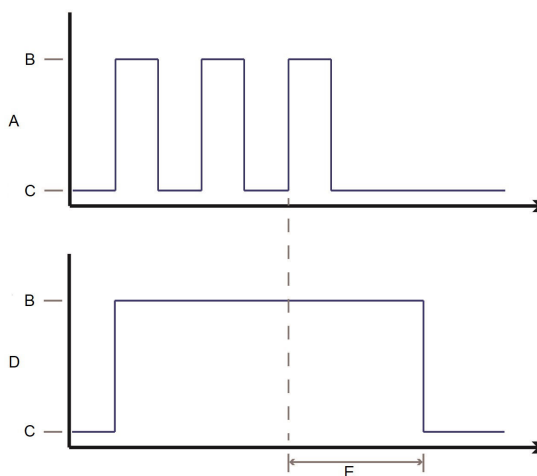**Figure 6-9: Hold Time Configuration**

- A. *Input state*
- B. *True*
- C. *False*
- D. *Reported state*
- E. *Hold time*

## Latching warnings

### **▲ WARNING**

When state latching is enabled, the discrete variable reported to the system will represent the latched value which may not be the actual state value measured by the Rosemount 702 Wireless Discrete Transmitter.

### **▲ WARNING**

Ensure that the state latch time value is long enough for the value to be reported throughout the entire system to guarantee the state transition is not missed. After configuring discrete latching function, check for proper operation at the system level to ensure the desired state transitions are captured as desired.

## 6.4 Discrete output circuits, measurement option code 42

The Rosemount 702 Wireless Discrete Transmitter has two channels that can each be configured for discrete input or output. Inputs must be dry contact switch inputs and these were described in [Dry contact switch inputs](#). Outputs are a simple switch closure to activate an output circuit. The transmitter output does not provide any voltage or current, the output circuit must have power of its own. The transmitter output has maximum switch capacity per channel of 26 volts DC and 100 milliamps.

---

### Note

It is very important that the polarity of the output circuit is as shown in the wiring diagrams, with the positive (+) side of the circuit wired to the + terminal of each channel, and the negative (-) side of the circuit wired to the CMN terminal. If the output circuit is wired backwards, it will remain active (switch closed) regardless of the state of the output channel.

---

## 6.5 Discrete output switch functionality

The discrete output of the Rosemount 702 Wireless Discrete Transmitter is driven by the host control system, through the Wireless Gateway, and out to the transmitter. The time required for this wireless communication from the Gateway to the transmitter is dependent on many factors, including the size and topology of the network and the total amount of downstream traffic on the wireless network. For a network that is constructed to our best practices, typical delays in communication of a discrete output from the Gateway to the transmitter are 15 seconds or less. Remember that this delay is only part of the latency that will be observed in a control loop.


---

### Note

The output switch functionality of the Rosemount 702 Wireless Discrete Transmitter requires that the network is managed by a version 4 Wireless Gateway, with v4.3 or greater firmware installed.


---

**Figure 6-10: Output Circuit Wiring**

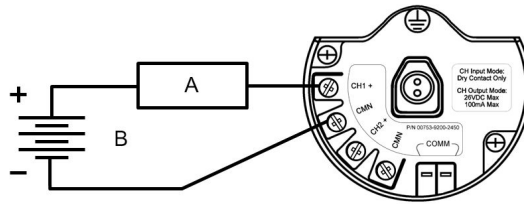

- A. Load
- B. Output

**Figure 6-11: Possible Configurations for Both Channel 1 and Channel 2**

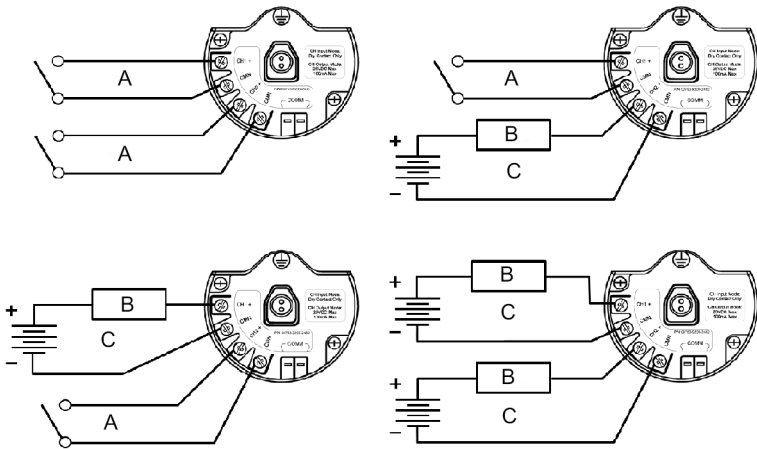


- A. Input
- B. Load
- C. Output

## 6.6 Special considerations for dual output circuits

If both channels are connected to output circuits, it is very important that the CMN terminal of each circuit be at the same voltage. Employing a common ground for both output circuits is one way to ensure that both circuits have CMN terminals at the same voltage.




**Figure 6-12: Dual Output Circuits with a Common Ground**

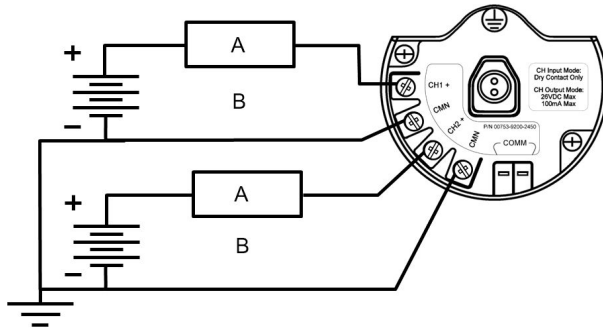

- A. Load
- B. Output

If two output circuits are connected to a single Rosemount 702 Wireless Discrete Transmitter with a single power supply, both CH + and CMN terminals must be connected to each output circuit. The negative power supply wires must be at the same voltage and connected to both CMN terminals.

**Figure 6-13: Dual Output Circuits with One Power Supply**

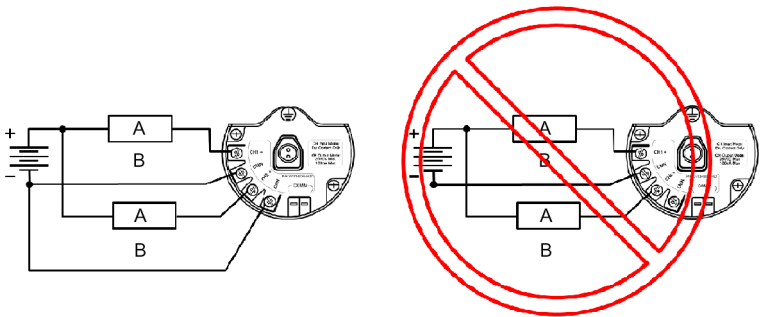


- A. Load
- B. Output

## 6.7 Switching greater currents or voltages

It is important to note that the maximum output switching capacity is 26 volts DC and 100 milliamps. If a greater voltage or current is to be switched, an interposing relay circuit can be used. Figure 6-14 shows an example of a circuit to switch higher currents or voltages.

**Figure 6-14: Wiring an Interposing Relay to Switch Greater Currents or Voltages**

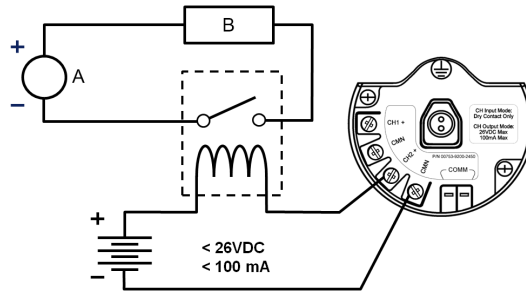

- A. Power Supply
- B. Load


## 6.8 Plunger arrival detection

### Product description

The Rosemount 702 Wireless Discrete Transmitter for plunger arrival detection is designed to work with the ETC Cyclops plunger arrival sensor (ET-11000). The transmitter provides power to the plunger arrival sensor, reads and communicates the sensor state via *WirelessHART*<sup>®</sup>. Features of the transmitter include:

- Simple and easy installation practices currently being used for robust installations
- Flexibility to meet the most demanding applications
- Sensor state latching for host system compatibility
- Provides power to external plunger arrival sensor
- The integral LCD display conveniently displays the latched plunger sensor state, power output state, and diagnostics of the transmitter


**Figure 6-15: Rosemount 702 for Plunger Arrival**

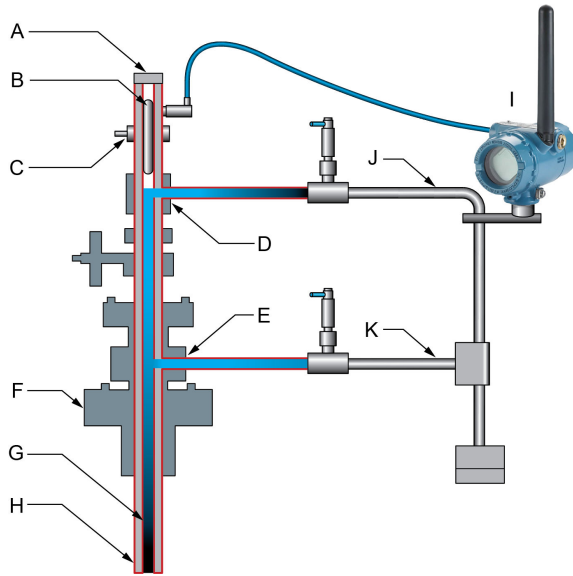


- A. Plunger arrival sensor (ETC Cyclops)
- B. Rosemount 702 Plunger Arrival
- C. Lubricator
- D. Plunger
- E. Wastewater
- F. Upper lubricator outlet
- G. Lower lubricator outlet
- H. Well casing
- I. Production gas
- J. Well casing/production tube
- K. Well casing

### 6.8.1 Terminal block connections

The plunger arrival detection configuration for measurement option code 52 is intended for use with the ETC Cyclops™ Plunger Arrival Sensor.

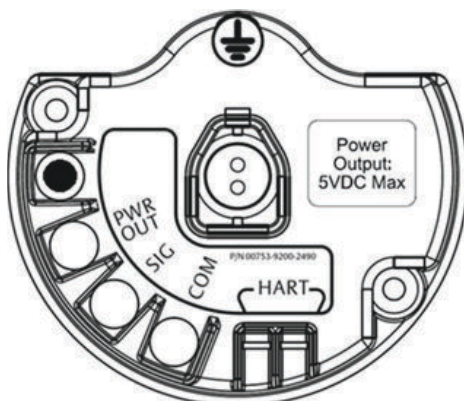**Figure 6-16: Plunger Arrival Terminal Diagram**

The wiring connections to the ETC Cyclops Sensor are made according to [Figure 6-17](#).

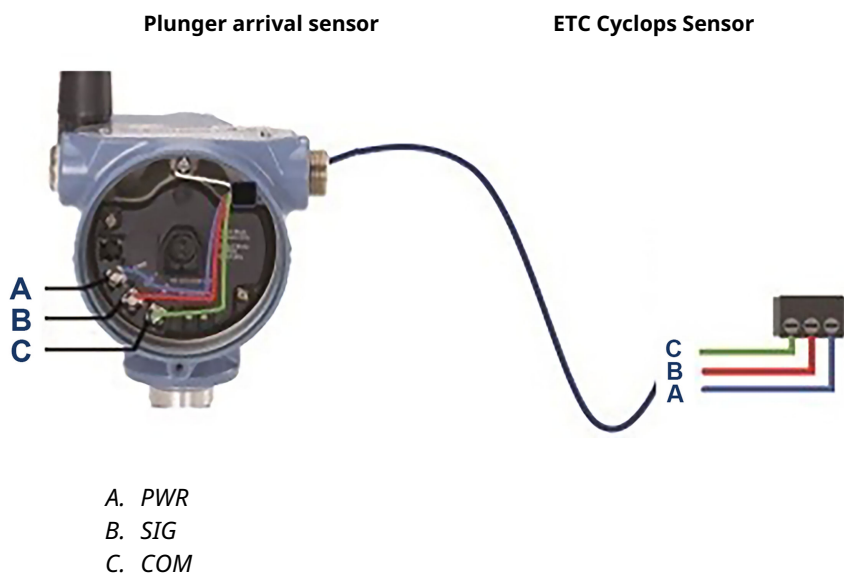**Figure 6-17: Wiring Configuration**

For mounting and maintenance of the ETC Cyclops Sensor, refer to the ETC Cyclops Plunger Arrival Sensor [Manual](#).

## 6.8.2 System Verification

After installation of the 702DX52 for plunger arrival, verify functionality.


- **Verify the sensor:** To do so, pass a ferrous object (ex. Wrench) past the cyclops sensor to simulate an arrival. Verify via the LCD screen and/or field communicator that channel 1 indicates a state change. If a state change is seen, sensor wiring is correct; if nothing is seen, please go back through the installation steps and confirm that everything has been done accordingly.
- **Verify System integration:** It is important to verify the latch time is configured correctly. The default latch period is set to one minute. Verify the host system can detect the arrival event by moving a ferrous metal object (ex. Wrench) past the arrival sensor. The signal should be passed from the device, through the Wireless Gateway and detected at the final host application (ex. PLC, Modbus/OPC, etc.). If nothing is seen, confirm the latch time is appropriate considering the full system scan cycle.


## 6.9 Leak sensors, liquid hydrocarbon detection, measurement option code 61

### 6.9.1 Terminal block connections

The Liquid Hydrocarbon Detection configuration is intended for use with the nVent™ RAYCHEM Fast Fuel Sensor, or TraceTek sensing cable.

**Figure 6-18: Fuel Sensor Terminal**

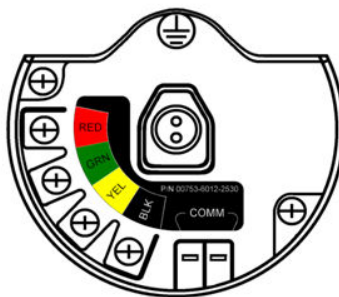

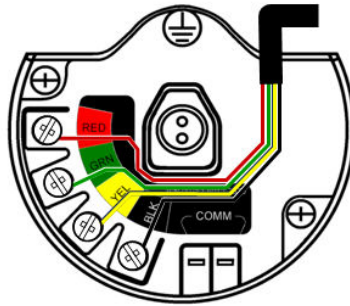**Figure 6-19: Fuel Sensor Connection**

### 6.9.2 Connecting to the fast fuel sensor and TraceTek sensing cable


The connections to the fast fuel sensor or sensing cable are made by matching the appropriately colored wires to the matching colored termination lugs.

#### Note

All part numbers associated with the fuel sensor cable wiring refer to products sold by nVent™ Thermo Controls, LLC.


The Rosemount 702 Wireless Discrete Transmitter is compatible with the Standard (TT-FFS) and Water Resistant (TT-FFS-WR) Fast Fuel Sensors. One transmitter can support up to 3 Fast Fuel sensors. These Fast Fuel sensors are connected using TraceTek Modular Leader Cable (TT-MLC-MC-BLK), optional modular jumper cables (TT-MJC-xx-MC-BLK) and branching connectors (TT-ZBC-MC-BLK) as suggested in [Figure 6-20](#).

**Figure 6-20: Fuel Sensor Wiring**

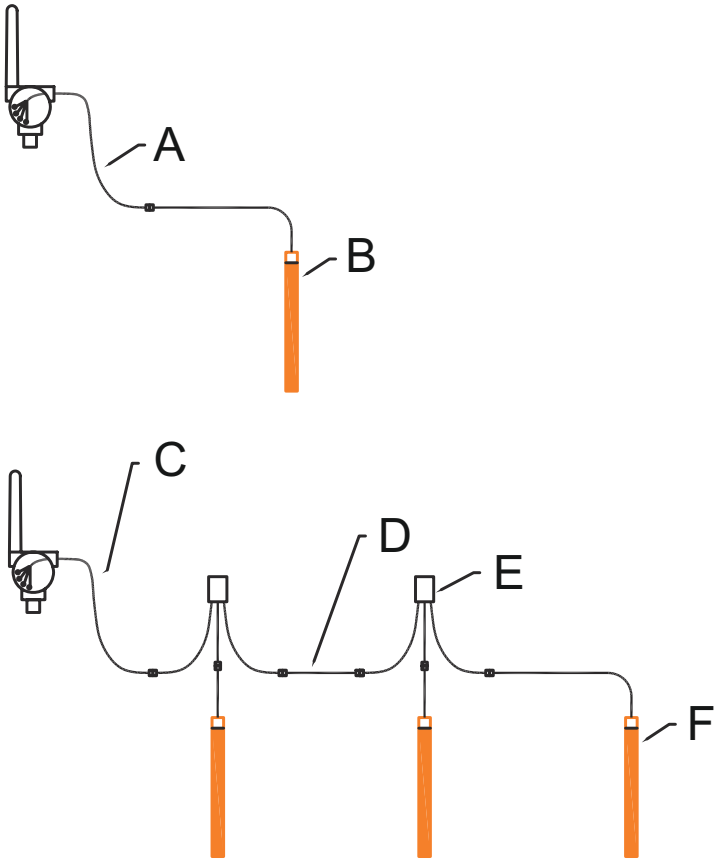

- A. TT-MLC-MC-BLK (Leader cable)
- B. TT-FFS or TT-FFS-WR (Fast fuel sensor probe)
- C. TT-MLC-MC-BLK (Leader cable)
- D. TT-MJC-xx-MC-BLK (Optional jumper cable)
- E. TT-ZBC-xx-MC-BLK (Branch connector)
- F. TT-FFS or TT-FFS-WR (Fast fuel sensor probe)

The transmitter can support up to 500 feet of TraceTek hydrocarbon or solvent sensor cable (TT5000 or TT5001 series). The total amount of sensor cable connected to a single transmitter is not to exceed 500 ft. (150 m). However leader cable, jumper cables (if used) and branch connectors are not included in the 500-foot limit. See [Figure 6-21](#) for typical configurations.

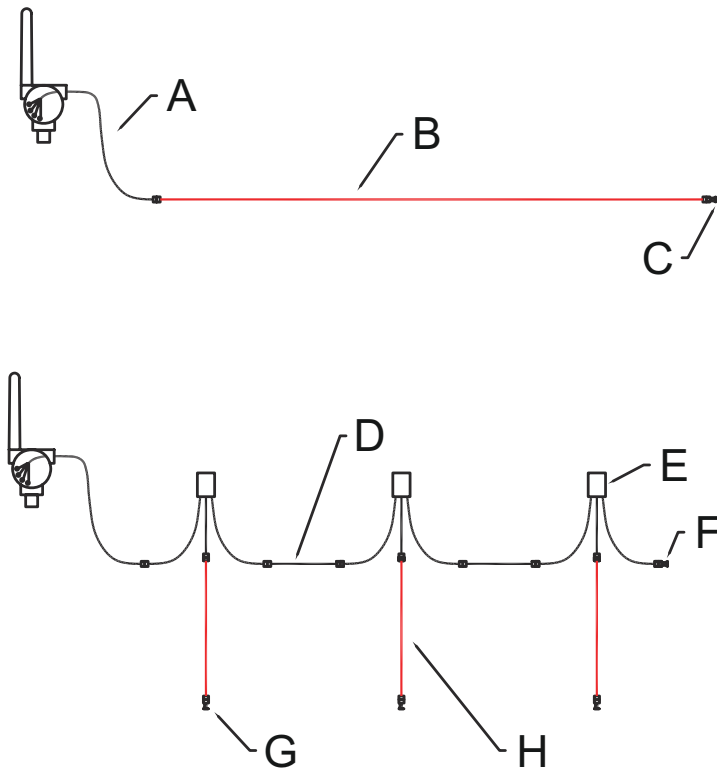**Figure 6-21: Fuel Sensor Cable Wiring**

- A. TT-MLC-MC-BLK (Leader Cable)
- B. TT5000/TT5001 Sensor cable (up to 500 ft.)
- C. TT-MET-MC (End termination)
- D. TT-MJC-xx-MC-BLK (Optional jumper cable)
- E. TT-ZBC-xx-MC-BLK (Branch connector)
- F. TT-MET-MC (End termination)
- G. TT-MET-MC (End termination)
- H. Up to 500-ft. TT5000 or TT5001 sensor cable (Total per 702)

Important notes regarding the use of nVent TraceTek Fast Fuel Sensor and TraceTek sensing cable:

- nVent TraceTek sensors must be installed as per manufacturer recommendations.



- Do not run the transmitter for long periods (more than two weeks) with a nVent fuel sensor in the leak state as this will more rapidly deplete the power module.

### 6.9.3 Liquid hydrocarbon detection interface, for Modbus® mapping

Table 6-6 describes use of the Rosemount 702 Wireless Discrete Transmitter for hydrocarbon detection in other communication's protocols such as Modbus or OPC. It is imperative that both PV and SV be mapped to the host system so as to make a good interpretation of the condition and status of the leak detector.

**Table 6-6: Liquid Hydrocarbon Detection Interface, for Modbus Mapping**

PV	SV	Description/interpretation
1.0	1.0	Normal condition, no leak detected, sensor status good
0.0	1.0 or 0.0	Leak detected, sensor status good
1.0	0.0	Sensor Not Connected, Assume Leak, take appropriate action


#### NOTICE

It is imperative that both PV and SV be mapped to the host system so the diagnostic information on the sensor status is captured.

In addition, system considerations must be observed to ensure that the device is still connected to the wireless network and reporting values. On an Emerson Wireless Gateway, this can be done by referring to the parameter: PV\_HEALTHY. PV\_HEALTHY has a "True" state when the device is on the network and its updates are current, not late or stale, and the device is functioning properly. A "False" state of PV\_HEALTHY means the device is either off the network, the data updates are not current, or that there is a malfunction of the device (such as an electronics failure). In the case of a "False" state of PV\_HEALTHY, it is recommended to assume the device is not connected to the network and take appropriate action.

#### Mapping the PV, SV, and PV\_HEALTHY variables and parameter

Below is a Gateway screen where the PV, SV, and PV\_HEALTHY variables and parameter can be mapped.

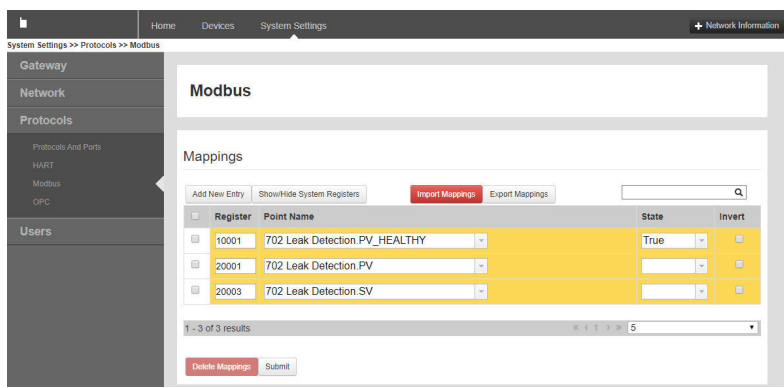**Figure 6-22: Wireless Gateway Modbus Register Map**

The Fast Fuel Sensor Diagnostics will propagate via the SV variable. This additional information will provide additional sensor Status information while using the TraceTek Fast Fuel Sensor.

### **⚠ WARNING**

If a device is not present on the wireless network, appropriate action must be taken by the host system.

## 6.10 Field Communicator use

### **Note**

To communicate with a Field Communicator, power the Rosemount 702 Wireless Discrete Transmitter by connecting the power module.


**Table 6-7: Rosemount 702 Fast Key Sequence**

Function	Fast Key sequence	Menu items
Device information	2, 2, 4, 3	Manufacturer Model, Final Assembly Number, Universal, Field Device, Software, Hardware, Descriptor, Message, Date, Model Number I, II, III, SI Unit Restriction, Country
Guided setup	2, 1	Join Device to Network, Configure Update Rate, Configure Sensor, Calibrate Sensor, Configure Display, Configure Process Alarms
Manual setup	2, 2	Wireless, Process Sensor, Percent of Range, Device Temperatures, Device Information, Device Display, Other

**Table 6-7: Rosemount 702 Fast Key Sequence (continued)**

Function	Fast Key sequence	Menu items
Wireless	2, 2, 1	Network ID, Join Device to Network, Configure Update Rate, Configure Broadcast Power Level, Power Mode, Power Source
Sensor calibration	3, 4, 1	Output configuration, input configuration

**Figure 6-23: Field Communicator Connections**

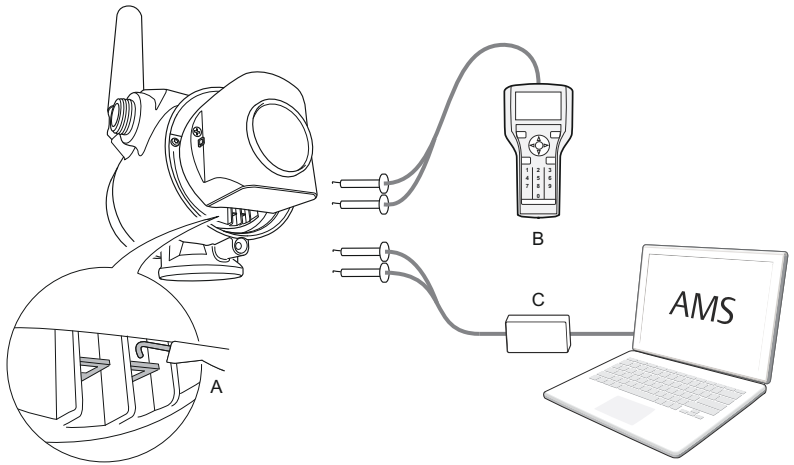

- A. Communication terminals
- B. Handheld communicator
- C. Modem

## 7 Safety shower and eye wash monitoring

The Rosemount 702 Wireless Discrete Transmitter can be used to monitor safety showers and eye wash stations by using switch kits provided by TopWorx™, an Emerson company. These kits are ordered as a part of the transmitter model code, or separately as an accessory kit, and are available for both insulated and un-insulated pipes. These kits contain the switches, brackets and cables that are necessary to install the transmitter to monitor both the safety shower and the eye wash in a single station. Because each has two input channels, one transmitter can be used to monitor both a safety shower and an eye wash.

Each Safety Shower Monitoring kit contains:

- Two TopWorx GO™ Switch magnetic proximity switches
- Two cables, one six foot and one twelve foot
- Two black polymer cable glands
- Mounting kit for safety shower and eye wash

### Safety shower monitoring

When the shower valve is activated (valve open) by pulling down on the handle, the TopWorx switch is activated (closed switch) and the Rosemount 702 Wireless Discrete Transmitter senses that switch closure. This switch state is then transmitted by the transmitter to the Gateway, which then sends that information to the control host or alert system. When the shower valve is closed, the switch remains in the activated state until it is reset by a technician. The switch can be re-set only by placing a ferrous metal object on the far side of the sensing area of the switch.

**Figure 7-1: TopWorx Switch Installed on a Safety Shower**



**Eye wash monitoring**

When the eye wash valve is activated (valve open) by pushing down on the hand paddle, the TopWorx switch is activated (closed switch) and the Rosemount 702 Wireless Discrete Transmitter senses that switch closure. This switch state is then transmitted by the transmitter to the Gateway, which then sends that information to the control host or alert system. When the eye wash valve is closed, the switch remains in the activated state until it is reset by a technician. The switch can be reset only by placing a ferrous metal object on the far side of the sensing area of the switch.

**Figure 7-2: TopWorx Switch Installed on an Eye Wash Station**



## 8 Product certification

Rev 3.3

### 8.1 European Directive information

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at [Emerson.com](https://www.emerson.com).

### 8.2 Telecommunications compliance

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

### 8.3 FCC and ISED

#### FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- This device may not cause harmful interference; this device must accept any interference received, including interference that may cause undesired operation.
- This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.
- Changes or modification to the equipment not expressly approved by Rosemount, Inc. could void the users authority to operate the equipment.

#### ISED Notice

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à la norme RSS-247 Industrie Canada exempt de licence. Son fonctionnement est soumis aux deux conditions suivantes:

- cet appareil ne doit pas provoquer d'interférences et.
- cet appareil doit accepter toute interférence, y compris les interférences pouvant causer un mauvais fonctionnement du dispositif.

## 8.4 Ordinary location certification from FM approvals

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by FM Approvals, a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## 8.5 Installing equipment in North America

The US National Electrical Code<sup>®</sup> (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

## 8.6 USA

### 8.6.1 I5 CSA Intrinsic Safety (USA)

**Certificate:** 1143113

**Standards:** FM Class 3600: 2011, FM Class 3610:2010, FM Class 3810: 2005

**Markings:** IS Class I/II/III, Division I, Groups A, B, C, D, E, F, and G, T4; Class I, Zone 0 AEx ia IIC T4; Ga T4 ( $-50\text{ °C} \leq T_a \leq +70\text{ °C}$ )

### 8.6.2 N5 CSA Class 1 Division 2 (USA)

**Certificate:** 1143113

**Standards:** FM Class 3600: 2011, FM Class 3610:2010, FM Class 3810: 2005

**Markings:** Class 1, Division 2, Groups A, B, C, and D, T5( $-50\text{ °C} \leq T_a \leq +70\text{ °C}$ ); Class II, Division 1 Groups E, F, G, T5( $-50\text{ °C} \leq T_a \leq +85\text{ °C}$ ); Class III; Also include use in Cl, I, Zone 2, IIC, T5.

**Special Condition for Safe Use (X):**

See 00702-1020 for installation requirements.

## 8.7 Canada

### 8.7.1 I6 CSA Intrinsically Safe (Canada)

**Certificate:** 1143113

**Standards:** CAN/CSA-60079-0:-2015, CSA C22.2 No. 94.2-07, CAN/CSA-C22.2 No. 61010-1-12, CAN/CSA C22.2 No. 60079-11:14, CSA Std C22.2 No. 60529:16

**Markings:** Intrinsically Safe Class I, Division 1, Groups A, B, C and D, T4; Ex ia IIC Ga Type 4X

### 8.7.2 N6 CSA Class I Division 2 (Canada)

**Certificate:** 1143113

**Standards:** CAN/CSA-60079-0:-2015, CSA C22.2 No. 94.2-07, CAN/CSA-C22.2 No. 61010-1-12, CSA C22.2 No. 213-2017, CSA Std C22.2 No. 60529:16

**Markings:** Suitable for Class 1, Division 2, Groups A, B, C, and D, T5; Cl. I, Zone 2, IIC, T5;

**Special Condition for Safe Use (X):**


See 00702-1020 for installation requirements.

## 8.8 Europe

### 8.8.1 I1 ATEX Intrinsic Safety

**Certificate:** Baseefa07ATEX0239X

**Standards:** EN IEC 60079-0: 2018, EN 60079-11: 2012

**Markings:**  II 1 G Ex ia IIC T4 Ga, T4(-60°C ≤ T<sub>a</sub> ≤ +70°C)  
Ex ia IIC T5 Ga, T5(-60°C ≤ T<sub>a</sub> ≤ +40°C)

For use with Rosemount SmartPower™ power module part number 753-9220-0001, or for use with Emerson SmartPower option 701PBKKF, or MHM-89004 Blue Power Module.




Sensor terminal parameters (option code 32)	Fuel sensor terminal parameters (option code 61)	Plunger arrival transmitter parameters (option code 52)
$U_O = 6.51 \text{ V}$	$U_O = 7.8 \text{ V}$	$U_O = 6.6 \text{ V}$
$I_O = 13.37 \text{ mA}$	$I_O = 92 \text{ mA}$	$I_O = 125 \text{ mA}$
$P_O = 21.76 \text{ mW}$	$P_O = 180 \text{ mW}$	$P_O = 202 \text{ mW}$
$C_i = 0.216 \text{ }\mu\text{F}$	$C_i = 10 \text{ nF}$	$C_i = 8.36 \text{ nf}$
$C_{OIIc} = 23.78 \text{ }\mu\text{F}$	$C_{OIIc} = 9.2 \text{ }\mu\text{F}$	$L_i = 0$
$C_{OIIb} = 549.78 \text{ }\mu\text{F}$	$C_{OIIb} = 129 \text{ }\mu\text{F}$	$C_o = 74 \text{ nF}$
$C_{OIIa} = 1000\mu\text{F}$	$C_{OIIa} = 1000\mu\text{F}$	$L_o = 1.5 \text{ mH}$
$L_i = 0$	$L_i = 0$	N/A
$L_{OIIc} = 200 \text{ mH}$	$L_{OIIc} = 4.2 \text{ mH}$	N/A
$L_{OIIb} = 800 \text{ mH}$	$L_{OIIb} = 16.8 \text{ mH}$	N/A
$L_{OIIa} = 1000 \text{ mH}$	$L_{OIIa} = 33.6 \text{ mH}$	N/A

**Special Condition for Safe Use (X):**

1. The surface resistivity of the antenna is greater than 1 GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
2. The Model 701PBKFF Power Module, MHM-89004 Blue Power Module or Intelligent Power Module 71008 may be replaced in a hazardous area. The Power Modules have a surface resistivity greater than 1 GΩ and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.
3. The Model 702 enclosure may be made from aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

**8.8.2 IU ATEX Intrinsic Safety for Zone 2**

- Certificate:** Baseefa12ATEX0122X
- Standards:** EN IEC 60079-0: 2018, EN 60079-11: 2012
- Markings:**  II 3 G Ex ic IIC T4 Gc, T4(-60 °C ≤ T<sub>a</sub> ≤ +70 °C)  
Ex ia IIC T5 Gc, T5(-60 °C ≤ T<sub>a</sub> ≤ +40 °C)

Discrete input sensor terminal	Hydrocarbon sensor transmitter output	Discrete Input transmitter rev 2 output	Plunger Arrival Transmitter Output
$U_o = 6.6 \text{ V}$	$U_o = 7.8 \text{ V}$	$U_o = 6.6 \text{ V}$	$U_o = 6.6 \text{ V}$
$I_o = 26.2 \text{ mA}$	$I_o = 92 \text{ mA}$	$I_o = 13.4 \text{ mA}$	$I_o = 125 \text{ mA}$
$P_o = 42.6 \text{ mW}$	$P_o = 180 \text{ W}$	$P_o = 21.8 \text{ W}$	$P_o = 202 \text{ mW}$
$C_o = 10.9 \mu\text{F}$	$C_i = 10 \text{ F}$	$C_i = 0.216 \text{ nF}$	$C_i = 8.36 \text{ nF}$
$L_o = 500 \mu\text{H}$	$L_i = 0$	$L_i = 0$	$L_i = 0$

**Special Conditions for Safe Use (X):**

1. The surface resistivity of the antenna is greater than 1 GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.
2. The Model 701PBKKF Power Module, MHM-89004 Blue Power Module, or Intelligent Power Module 71008 may be replaced in a hazardous area. The Power Modules have a surface resistivity greater than 1 GΩ and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

## 8.9 International

### 8.9.1 I7 IECEx Intrinsic Safety

- Certificate:** IECEx BAS 07.0082X
- Standards:** IEC 60079-0: 2017, IEC 60079-11: 2011
- Markings:** Ex ia IIC T4 Ga, T4(-60 °C ≤ T<sub>a</sub> ≤ +70 °C)  
Ex ia IIC T5 Ga, T5(-60 °C ≤ T<sub>a</sub> ≤ +40 °C)

Sensor terminal parameters (option code 32)	Fuel sensor terminal parameters (option code 61)	Plunger arrival transmitter parameters (option code 52)
$U_o = 6.51 \text{ V}$	$U_o = 7.8 \text{ V}$	$U_o = 6.6 \text{ V}$
$I_o = 13.37 \text{ mA}$	$I_o = 92 \text{ mA}$	$I_o = 125 \text{ mA}$
$P_o = 21.76 \text{ mW}$	$P_o = 180 \text{ mW}$	$P_o = 202 \text{ mW}$
$C_i = 0.216 \mu\text{F}$	$C_i = 10 \text{ nF}$	$C_i = 8.36\text{nF}$
$C_o \text{ IIC} = 23.78 \mu\text{F}$	$C_o \text{ IIC} = 9.2 \mu\text{F}$	$L_i = 0$

Sensor terminal parameters (option code 32)	Fuel sensor terminal parameters (option code 61)	Plunger arrival transmitter parameters (option code 52)
$C_{O\ IIB} = 549.78\ \mu\text{F}$	$C_{O\ IIB} = 129\ \mu\text{F}$	$C_O = 74\ \text{nF}$
$C_{O\ IIA} = 1000\ \mu\text{F}$	$C_{O\ IIA} = 1000\ \mu\text{F}$	$L_O = 1.5\ \text{mH}$
$L_i = 0$	$L_i = 0$	N/A
$L_{O\ IIC} = 200\ \text{mH}$	$L_{O\ IIC} = 4.2\ \text{mH}$	N/A
$L_{O\ IIB} = 800\ \text{mH}$	$L_{O\ IIB} = 16.8\ \text{mH}$	N/A
$L_{O\ IIA} = 1000\ \text{mH}$	$L_{O\ IIA} = 33.6\ \text{mH}$	N/A

**Special Conditions for Safe Use (X):**

1. The surface resistivity of the antenna is greater than 1 GΩ. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or dry cloth.
2. The Model 701PBKKF Power Module, MHM-89004 Blue Power Module, or Intelligent Power Module 71008 may be replaced in a hazardous area. The Power Modules have a surface resistivity greater than 1 GΩ and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up. The 702 enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

**8.9.2 IY IECEx Intrinsic Safety for Zone 2**

- Certificate:** IECEx BAS 12.0082X
- Standards:** IEC 60079-0: 2017, IEC 60079-11: 2011
- Markings:** Ex ic IIC T4 Gc, T4 (-40 °C ≤ T<sub>a</sub> ≤ 70 °C)  
Ex ic IIC T5 Gc, T5 (-40 °C ≤ T<sub>a</sub> ≤ 40 °C)

Discrete Input Sensor Terminal	Hydrocarbon Sensor Transmitter Output	Discrete Input Transmitter Rev 2 Output	Plunger Arrival Transmitter Output
$U_O = 6.6\ \text{V}$	$U_O = 6.6\ \text{V}$	$U_O = 6.6\ \text{V}$	$U_O = 6.6\ \text{V}$
$I_O = 26.2\ \text{mA}$	$I_O = 92\ \text{mA}$	$I_O = 13.4\ \text{mA}$	$I_O = 125\ \text{mA}$
$P_O = 42.6\ \text{mW}$	$P_O = 180\ \text{W}$	$P_O = 21.8\ \text{mW}$	$P_O = 202\ \text{W}$

Discrete Input Sensor Terminal	Hydrocarbon Sensor Transmitter Output	Discrete Input Transmitter Rev 2 Output	Plunger Arrival Transmitter Output
$C_O = 10.9 \mu\text{F}$	$C_i = 10 \text{ nF}$	$C_O = 0.216 \text{ nF}$	$C_O = 8.36 \text{ nF}$
$L_O = 500 \mu\text{H}$	$L_i = 0$	$L_i = 0$	$L_i = 0$

### Special Conditions for Safe Use (X):

1. The surface resistivity of the antenna is greater than 1 G $\Omega$ . To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or dry cloth.
2. The Model 701PBKKF Power Module, MHM-89004 Blue Power Module, or Intelligent Power Module 71008 may be replaced in a hazardous area. The Power Modules have a surface resistivity greater than 1 G $\Omega$  and must be properly installed in the wireless device enclosure. Care must be taken during transportation to and from the point of installation to prevent electrostatic charge build-up.

## 8.10 China

### 8.10.1 I3 China Intrinsic Safety

**Certificate:** GYJ23.1096X

**Markings:** (option 32, 52, 61): Ex ia IIC T4---T5 Ga, T4(-60 ~ 70 °C)/T5(-60 ~ 40 °C)

(option 32, 52, 42): Ex ic IIC T4---T5 Gc, T4(-60 ~ 70 °C)/T5(-60 ~ 40 °C)

Sensor terminal parameters (option code 32)	Terminal parameters (option code 42)		Plunger Arrival Transmitter (option code 52)	Fuel sensor terminal parameters (option code 61)
	Sensor	Switch		
$U_O = 6.6 \text{ V}$	$U_O = 6.6 \text{ V}$	$U_i = 26 \text{ V}$	$U_O = 6.6 \text{ V}$	$U_O = 7.8 \text{ V}$
$I_O = 13.4 \text{ mA}$	$I_O = 13.4 \text{ mA}$	$I_i = 100 \text{ mA}$	$I_O = 125 \text{ mA}$	$I_O = 92 \text{ mA}$
$P_O = 21.8 \text{ mW}$	$P_O = 21.8 \text{ mW}$	$P_i = 650 \text{ mW}$	$P_O = 202 \text{ mW}$	$P_O = 180 \text{ mW}$
$C_{O \text{ IIC}} = 21.78 \mu\text{F}$	$C_O = 10.9 \mu\text{F}$	N/A	$C_i = 8.36 \text{ nF}$	$C_O = 9.29 \mu\text{F}$
$C_{O \text{ IIB}} = 499.78 \mu\text{F}$	N/A	N/A	$L_i = 0 \text{ H}$	N/A

Sensor terminal parameters (option code 32)	Terminal parameters (option code 42)		Plunger Arrival Transmitter (option code 52)	Fuel sensor terminal parameters (option code 61)
	Sensor	Switch		
$C_{O\ IIA} = 1000\ \mu\text{F}$	N/A	N/A	$C_O = 0.0074\ \mu\text{F}$	N/A
$L_{O\ IIC} = 200\ \text{mH}$	$L_O = 0.025\ \text{mH}$	N/A	$L_O = 1.5\ \text{mH}$	$L_O = 2\ \text{mH}$
$L_{O\ IIB} = 800\ \text{mH}$	N/A	N/A		N/A
$L_{O\ IIA} = 1000\ \text{mH}$	N/A	N/A		N/A

**Special Condition for Safe Use (X):**

See certificate for special conditions.

## 8.11 Japan

### 8.11.1 I4 CML Intrinsic Safety

**Certificates:** CML 19JPN2026X

**Markings:** Ex ia IIC T4 X (-60 °C ~ +70 °C), Ex ia IIC T5 Ga (-60 °C ~ +70 °C)

**Special Condition for Safe Use (X):**

See certificate for special conditions.

## 8.12 EAC -- Belarus, Kazakhstan, Russia, Armenia, Kyrgyzstan

### 8.12.1 IM Technical Regulation Customs Union (EAC) Intrinsic Safety

**Certificate:** TOO T-Стандарт ЕАЭС KZ7500525.01.01.00651

**Markings:** (option 32, 61): 0Ex ia IIC Ga T4/T5 X  
 T4 (-60 °C ≤ T<sub>a</sub> ≤ +70 °C)  
 T5 (-60 °C ≤ T<sub>a</sub> ≤ +40 °C)

**Special Condition for Safe Use (X):**

See certificate for special conditions.

### 8.12.2 IX Technical Regulation Customs Union (EAC) Intrinsic Safety

**Certificate:** TOO T-Стандарт ЕАЭС KZ7500525.01.01.00651

**Markings:** (option 32, 42): 2Ex ic IIC Gc T4/T5 X  
 T4 (-60 °C ≤ T<sub>a</sub> ≤ +70 °C)  
 T5 (-60 °C ≤ T<sub>a</sub> ≤ +40 °C)

**Special Condition for Safe Use (X):**

See certificate for special conditions.

## 8.13 Brazil

### 8.13.1 I2 Brazil Intrinsic Safety

**Certificate:** UL-BR 13.0590X

**Markings:** Ex ia IIC Ga T4/T5 X  
 T4 (-60 °C ≤ T<sub>a</sub> ≤ +70 °C)  
 T5 (-60 °C ≤ T<sub>a</sub> ≤ +40 °C)

**Special Condition for Safe Use (X):**

See certificate for special conditions.

### 8.13.2 IZ Brazil Intrinsic Safety

**Certificate:** UL-BR 13.0322X

**Markings:** Ex ic IIC Gc T4/T5 X  
 T4 (-60 °C ≤ T<sub>a</sub> ≤ +70 °C)  
 T5 (-60 °C ≤ T<sub>a</sub> ≤ +40 °C)

**Special Condition for Safe Use (X):**

See certificate for special conditions.

## 8.14 Korea

### 8.14.1 IP Republic of Korea Intrinsic Safety

**Certificate:** 10-KB4BO-0136




**Markings:** Ex ia IIC T4 Ga (-60 °C ≤ T<sub>a</sub> ≤ 70 °C)  
 Ex ia IIC T5 Ga (-60 °C ≤ T<sub>a</sub> ≤ 40 °C)

## 8.15 Combinations

**KQ** Combination of I1, I5, and I6

## 8.16 EU Declaration of Conformity

Figure 8-1: EU Declaration of Conformity

	<h3>EU Declaration of Conformity</h3> <p>No: RMD 1066 Rev. W</p>	
<p>We,</p>		
<p><b>Rosemount, Inc.</b>  <b>6021 Innovation Boulevard</b>  <b>Shakopee, MN 55379-4676</b>  <b>USA</b></p>		
<p>declare under our sole responsibility that the product,</p>		
<p><b>Rosemount™ 702 Wireless Discrete Transmitter</b></p>		
<p>manufactured by,</p>		
<p><b>Rosemount, Inc.</b>  <b>6021 Innovation Boulevard</b>  <b>Shakopee, MN 55379-4676</b>  <b>USA</b></p>		
<p>to which this declaration relates, is in conformity with the provisions of the European Union Directives, including the latest amendments, as shown in the attached schedule.</p>		
<p>Assumption of conformity is based on the application of the harmonized standards and, when applicable or required, a European Union notified body certification, as shown in the attached schedule.</p>		
 <hr/> <p>(signature)</p>	<p>Vice President of Global Quality</p> <hr/> <p>(function)</p>	
<p>Mark Lee</p> <hr/> <p>(name)</p>	<p>5-Aug-21 Boulder, CO USA</p> <hr/> <p>(date of issue &amp; place)</p>	
<p>Page 1 of 2</p>		



# EU Declaration of Conformity

No: RMD 1066 Rev. W



## EMC Directive (2014/30/EU)

Harmonized Standards:  
EN 61326-1: 2013  
EN 61326-2-3: 2013

## Radio Equipment Directive (RED) (2014/53/EU) Rosemount 702 Wireless Discrete Transmitter (702DX32, 702DX42, 702DX52, 702DX61)

Harmonized Standards:  
EN 300 328 V2.2.2: 2019  
EN 301 489-1 V2.2.0  
EN 301 489-17: V3.2.0  
EN 61010-1: 2010  
EN 62311: 2008

## ATEX Directive (2014/34/EU)

### Rosemount 702 Wireless Discrete Transmitter (Options 702DX32, 702DX52, 702DX61)

**Baseefa07ATEX0239X – Intrinsic Safety**  
Equipment Group II, Category 1G  
Ex ia IIC T4/T5 Ga  
Equipment Group II, Category M1  
Ex ia I Ma  
Harmonized Standards:  
EN IEC 60079-0:2018  
EN 60079-11:2012

### Rosemount 702 Wireless Discrete Transmitter (Options 702DX32, 702DX42, and 702DX52)

**Baseefa12ATEX0122X – Intrinsic Safety**  
Equipment Group II, Category 3G  
Ex ic IIC T4/T5 Gc  
Harmonized Standards:  
EN IEC 60079-0:2018  
EN 60079-11:2012

## ATEX Notified Body & ATEX Notified Body for Quality Assurance

SGS FIMKO OY [Notified Body Number: 0598]  
Takomotie 8  
00380 HELSINKI  
Finland



## 8.17 China RoHS

含有China RoHS 管控物质超过最大浓度限值的部件型号列表 Rosemount 702  
List of Rosemount 702 Parts with China RoHS Concentration above MCVs

部件名称 Part Name	有害物质 / Hazardous Substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr +6)	多溴联苯 Polybrominated biphenyls (PBB)	多溴联苯醚 Polybrominated diphenyl ethers (PBDE)
电子组件 Electronics Assembly	X	O	O	O	O	O
壳体组件 Housing Assembly	X	O	O	X	O	O

本表格系依据SJ/T11364的规定而制作。

This table is proposed in accordance with the provision of SJ/T11364.

O: 意为该部件的所有均质材料中该有害物质的含量均低于GB/T 26572所规定的限量要求。

O: Indicate that said hazardous substance in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: 意为在该部件所使用的的所有均质材料里，至少有一类均质材料中该有害物质的含量高于GB/T 26572所规定的限量要求。

X: Indicate that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.







**Quick Start Guide**  
**00825-0200-4702, Rev. HE**  
**July 2023**

©2023 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.

**ROSEMOUNT™**

