



PENBERTHY FLAT GLASS GAGE SCALES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Before installation these instructions must be read fully and understood

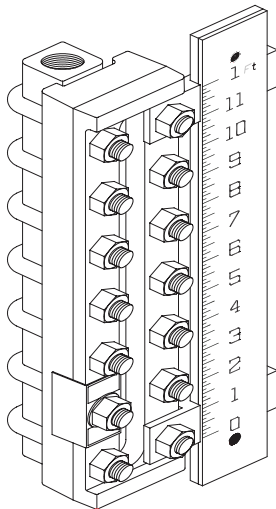


TABLE OF CONTENTS

Product warranty	1
1. About the manual.....	2
2. Introduction	2
2.1 Standard scale description	2
2.2 Special scale description	2
3. Inspection	2
3.1 User inspection.....	2
4. Installation	3
4.1 Preparation	3
4.2 Mounting to un-mounted liquid level gage	3
4.3 Mounting to mounted liquid level gage..	3
5. Operation	4
5.1 Pre-operational check.....	4
5.2 Operating.....	4
6. Maintenance	4
6.1 Preventative maintenance	4
6.2 Maintenance procedures	4
7. Removal - disassembly - reassembly	4-5
7.1 Disassembly.....	4
7.2 Reassembly.....	5
8. Disposal at end of useful life	5
9. Telephone assistance	5
10. Exploded parts diagram.....	6

Figures

Figure 1 Exploded parts diagram	6
---------------------------------------	---

Product warranty

Emerson warrants its Penberthy products as designed and manufactured to be free of defects in the material and workmanship for a period of one year after the date of installation or eighteen months after the date of manufacture, whichever is earliest. Emerson will, at its option, replace or repair any products which fail during the warranty period due to defective material or workmanship.

Prior to submitting any claim for warranty service, the owner must submit proof of purchase to Emerson and obtain written authorization to return the product. Thereafter, the product shall be returned to Emerson, with freight paid.

This warranty shall not apply if the product has been disassembled, tampered with, repaired or otherwise altered outside of Emerson's factory, or if it has been subject to misuse, neglect or accident.

The responsibility of Emerson hereunder is limited to repairing or replacing the product at its expense. Emerson shall not be liable for loss, damage or expenses related directly or indirectly to the installation or use of its products, or from any other cause or for consequential damages. It is expressly understood that Emerson is not responsible for damage or injury caused to other products, buildings, personnel or property, by reason of the installation or use of its products.

This is Emerson's sole warranty and in lieu of all other warranties, expressed or implied which are hereby excluded, including in particular all warranties of merchantability or fitness for a particular purpose.

This document and the warranty contained herein may not be modified and no other warranty, expressed or implied, shall be made by or on behalf of Emerson unless made in writing and signed by the company's general manager or director of engineering.

PENBERTHY FLAT GLASS GAGE SCALES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

1 ABOUT THE MANUAL

This manual has been prepared as an aid and guide for personnel involved in installation or maintenance. All instructions must be read and understood thoroughly before attempting any installation, operation or maintenance.

SAFETY INSTRUCTIONS

Emerson does not have any control over the manner in which its gage scales are handled, installed or used and Emerson cannot and does not warrant or guarantee that a gage scale is suitable for or compatible with the user's specific application.

WARNING

Vessel fluids may be pressurized and can unexpectedly exit vessel connections due to apparatus or material failure. Safety glasses should be worn when installing a gage scale. Failure to follow any instruction could possibly result in an inability to measure the contained fluid accurately or a malfunction of the liquid level gage with resulting sudden release of pressure, severe physical injury or property damage.

2 INTRODUCTION

Penberthy flat glass gage scales are used to measure the level of the contained fluid in the pressure vessel or holding tank. Penberthy standard flat glass gage scales are made of a strong weather resistant metal that has a natural finish with black graduation marks that contrast with the finish of the scale for ease of reading. Penberthy standard flat glass gage scales are furnished in customer specified increments and lengths and are assembled complete.

2.1 Standard scale description

Penberthy standard flat glass gage scales comprise three basic components. Use the exploded parts view in Section 10 as additional reference material.

Scale: a metal strip with markings as customer specified.

Backing plate: an aluminum strip onto which the scale is attached to give the scale some rigidity.

Mounting bracket: used to hold the gage scale in position on the flat glass gage. The mounting bracket is attached to the gage bolting by use of the existing nut and bolt and the gage scale is held in position in the bracket with a set screw provided with the bracket.

2.2 Special scale description

Penberthy special flat glass gage scales are provided completely assembled. All parts of the gage scale are mounted onto the backing plate during factory assembly. The mounting brackets are the only components which are not assembled to the gage scale.

3 INSPECTION

On receipt of a flat glass gage scale, check all components carefully for damage incurred in shipping. If damage is evident or suspected, do not attempt any installation. Notify the carrier immediately and request a damage inspection. Refer to exploded view drawing in Section 10 to inventory parts.

3.1 User inspection

The user should confirm that:

1. The gage scale markings and length conform to the description on the user's purchase order.
2. The length described in the purchase order agrees with the actual required length at the installation site.

SAFETY INSTRUCTIONS

If the length or markings of the gage scale as received do not conform with any of the criteria above, do not proceed with installation. Contact an authorized Penberthy distributor for assistance.

PENBERTHY FLAT GLASS GAGE SCALES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

4 INSTALLATION

Installation should only be undertaken by qualified personnel who are familiar with this equipment. They should have read and understood all of the instructions in this manual. The user should refer to the product proposal to obtain dimensional information.

WARNING

Use only qualified, experienced personnel who are familiar with liquid level gage equipment. DO NOT proceed with any installation of gage scales to the liquid level gage unless the liquid level gage has been relieved of all pressure or vacuum, has been allowed to reach ambient temperature and has been drained or purged of all fluids. Failure to follow instructions can cause serious personal injury and property damage.

4.1 Preparation

1. Secure a work bench with sufficient width and length to accommodate the gage scale mounting. The bench should be of sufficient size to accommodate the liquid level gage and gage scale.

4.2 Mounting to un-mounted liquid level gage

1. Loosen and remove the top and bottom nuts from the bolts on one side of the liquid level gage and any additional nuts depending on the number of brackets being used.
Note: Penberthy standard gage scales are provided with two mounting brackets. If the installation is subject to vibration or wind factors, it is recommended placing mounting brackets at intervals of two feet to four feet.
2. Place brackets on bolts with the bracket inset away from the liquid level gage, thread nuts on finger tight.
3. Loosen the set screw in the mounting brackets.
4. Place the gage scale into the insets of the mounting brackets. The '0' reading of the gage scale should be aligned with the bottom of the vision slot in the liquid level gage.
5. Hold the scale firmly in place in the bracket insets; tighten the set screws of the mounting brackets using a hex wrench.
6. Using a torque wrench, tighten all gage nuts to the proper torque value as specified in the liquid level gage Installation, Operation and Maintenance Instructions provided.

WARNING

Failure to comply with the proper torquing sequence or force value can lead to leakage, gasket blow-out or glass breakage resulting in gage failure, serious personal injury or property damage.

4.3 Mounting to mounted liquid level gage

WARNING

Use only qualified, experienced personnel who are familiar with liquid level gage equipment. DO NOT proceed with gage scale installation unless the liquid level gage has been relieved of all pressure or vacuum, has been allowed to reach ambient temperature and has been drained or purged of all fluids. Failure to follow instructions can cause serious personal injury and property damage.

1. Loosen and remove the top and bottom nuts from the bolts on one side of the liquid level gage and any additional nuts depending on the number of brackets being used.
Note: Penberthy standard gage scales are provided with two mounting brackets. If the installation is subject to vibration or wind factors, it is recommended placing mounting brackets at intervals of two feet to four feet.
2. Place brackets on bolts with the bracket inset away from the liquid level gage, thread nuts on finger tight.
3. Loosen the set screw in the mounting brackets.
4. Place the gage scale into the insets of the mounting brackets. The '0' reading of the gage scale should be aligned with the bottom of the vision slot in the liquid level gage.
5. Hold the scale firmly in place in the bracket insets; tighten the set screws of the mounting brackets using a hex wrench.
6. Using a torque wrench, tighten all gage nuts to the proper torque value as specified in the liquid level gage Installation, Operation and Maintenance Instructions provided.

WARNING

Failure to comply with the proper torquing sequence or force value can lead to leakage, gasket blow-out or glass breakage resulting in gage failure, serious personal injury or property damage.

PENBERTHY FLAT GLASS GAGE SCALES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

5 OPERATION

5.1 Pre-operational check

1. Ensure that all installation procedures have been completed.
2. Ensure that the gage scale is secure and well supported.
3. Ensure that the gage scale is located correctly.

5.2 Operating

Flat glass gages should be brought into service slowly. The glass used in Penberthy flat glass gages is tempered and can withstand minimal thermal shock and mechanical stress.

WARNING

Gage and gagecock installations should be brought into service slowly. The glass used in flat glass gages is tempered and can withstand minimal thermal shock and mechanical stress. Gagecocks should be opened slightly, and the gage and gagecock assembly temperature and pressure allowed to equalize slowly. If the gagecocks are equipped with ball checks, the gagecocks must be opened all the way after the pressure and temperature have equalized to permit operation of the automatic ball check in the event of gage glass failure. Failure to follow the recommended operating procedures can result in severe personal injury or property damage.

6 MAINTENANCE

Maintenance should only be undertaken by qualified, experienced personnel who are familiar with this equipment and have read and understood all the instructions in this manual.

WARNING

DO NOT proceed with any maintenance unless the gage and gagecock assembly has been relieved of all pressure or vacuum, has been allowed to reach ambient temperature and has been drained or purged of all fluids. Failure to do so can cause serious personal injury and property damage.

6.1 Preventative maintenance

On all installations the following items should be evaluated regularly by the user for purposes of maintenance:

1. Gage scales for cleanliness.
2. Gage scales to insure that scales are secure and well supported.
3. Gage scales for corrosion.

The user must determine an appropriate maintenance schedule necessary for his or her own specific application, upon evaluation of their own operating experience. Realistic maintenance schedules can only be determined with full knowledge of the services and application situation involved.

6.2 Maintenance procedures

Clean gage scales with a non-abrasive soap or detergent and a soft grit-free cloth or sponge. After the surface has been cleaned and rinsed of all foreign particles, it may be dried using a clean, soft, grit-free cloth.

7 REMOVAL - DISASSEMBLY - REASSEMBLY

WARNING

DO NOT proceed with the removal of the gage scale unless the gage and gagecock assembly has been relieved of all pressure or vacuum, has been allowed to reach ambient temperature and has been drained or purged of all fluids. Failure to do so can cause serious personal injury and property damage.

7.1 Disassembly

Refer to the exploded parts drawing in Section 10 for additional reference during disassembly and reassembly of the gage scale.

1. While holding the gage scale firmly, loosen the set screw (100) in the mounting brackets (73) with a hex wrench.
2. Remove the gage scale from the brackets (73) insets and place on work bench.

PENBERTHY FLAT GLASS GAGE SCALES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

CAUTION

If gage scale mounting brackets (73) are to be removed from the flat glass gage, the gage must first be relieved of all pressure or vacuum, been allowed to reach ambient temperature and drained or purged of all fluids.

7.2 Reassembly

Refer to the exploded parts drawing in Section 10 for additional reference during disassembly and reassembly of the gage scale.

1. If mounting brackets (73) were removed during disassembly, place brackets on the bolts with the bracket inset away from the flat glass gage, thread nuts on finger tight.
2. Place the gage scale into the insets of the mounting brackets (73). The '0' reading of the gage scale should be aligned with the bottom of the vision slot in the flat glass gage.
3. Hold the scale firmly in place in the bracket (73) insets, tighten the set screws (100) using a hex wrench.
4. If mounting brackets (73) were removed during disassembly, using a torque wrench, tighten all gage nuts to the proper torque value as specified in the flat glass gage Installation, Operation and Maintenance Instructions provided.

WARNING

Failure to comply with the proper torquing sequence or force value can lead to leakage, gasket blow-out or glass breakage resulting in gage failure, serious personal injury or property damage.

Note: refer to Section 5 Operation when returning to service.

8 DISPOSAL AT END OF USEFUL LIFE

Penberthy flat glass gage scales are used in a variety of fluid applications. By following the appropriate federal and industry regulations, the user must determine the extent of preparation and treatment the gage scale must incur before its disposal. A Material Safety Data Sheet (MSDS) may be required before disposal services accept certain components. Metal, glass and polymers should be recycled whenever possible. Refer to order and the applicable technical data sheet for materials of construction.

9 TELEPHONE ASSISTANCE

If you are having difficulty with your flat glass gage scale, contact your local Penberthy distributor. You may also contact the factory direct at (956) 430-2500 and ask for an applications engineer. So that we may assist you more effectively, please have as much of the following information available as possible when you call:

- Model #
- Name of the company from whom you purchased the Penberthy flat glass gage scale
- Invoice # and date
- Process conditions (pressure, flow rates, tank shape, etc)
- A brief description of the problem
- Trouble shooting procedures that failed

If attempts to solve your problem fail, you may request to return your gagecock to the factory for intensive testing. You must obtain a Return Authorization (R.A.) number from Emerson before returning anything. Failure to do so will result in the unit being returned to you without being tested, freight collect. To obtain an R.A. number, the following information (in addition to that above) is needed:

- Reason for return
- Person to contact at your company
- 'Ship-to' address


There is a minimum charge for evaluation of non-warranty units. You will be contacted before any repairs are initiated should the cost exceed the minimum charge. If you return a unit under warranty, but it is not defective, the minimum charge will apply.

PENBERTHY FLAT GLASS GAGE SCALES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

10 EXPLODED PARTS DIAGRAM

FIGURE 1

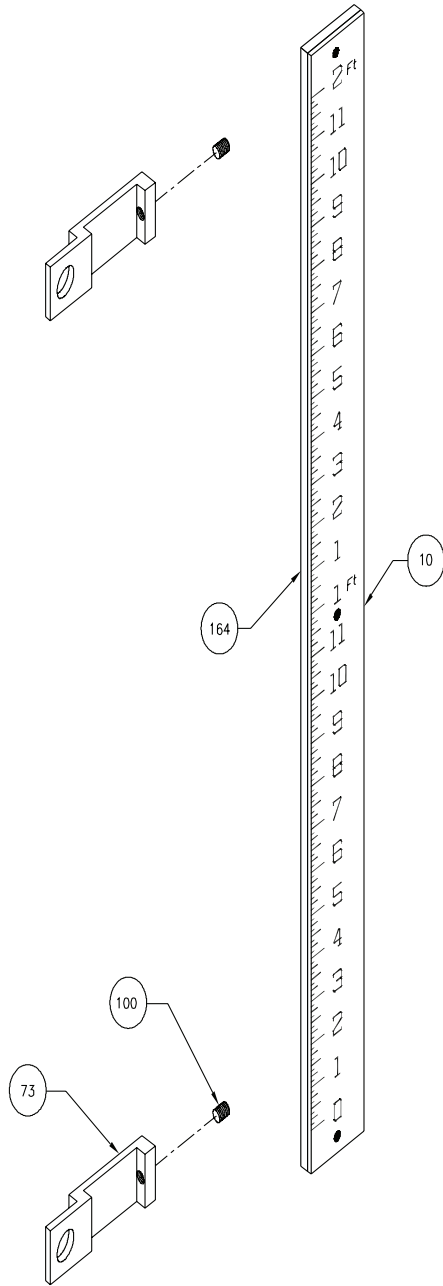

PARTS LIST

Item	Description
73	Bracket
164	Plate, backing
100	Screw, set
10	Scale

Neither Emerson, Emerson Automation Solutions, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Penberthy is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. Emerson Automation Solutions, Emerson and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.